

**Package Contents:**

- 1 ShowerSaver™
- 1 Stainless Steel Cradle
- 2 AA NiMH rechargeable Batteries
- 1 3M double-sided tape strip
- 1 (set) Tamperproof screw and nut (optional - see tamperproof guide for installation)
- 1 Damper stickers (optional\*)


**Tools Required for Installation:**

- Cloth • Timer • Rubbing Alcohol

**BEFORE YOU BEGIN:** the ShowerSaver™ was precision engineered to fit snug into the cradle, which helps to prevent the device from being easily removed. However, if you are installing this in an application where theft is not a concern, such as in the home, you may want to ensure that the units slides in and out of the cradle fairly easily. If your fit feels a bit too tight, simply hold the cradle in one hand (using a towel to protect your hand from edges) and use the other to carefully slide up and down until the desired fit is reached. This will also help to keep from weakening the double sided tape when the unit is removed and reinstalled for cleaning and battery changes.



1. Clean the outside of the cradle with alcohol and let dry. Remove liner from red side of 3M tape.

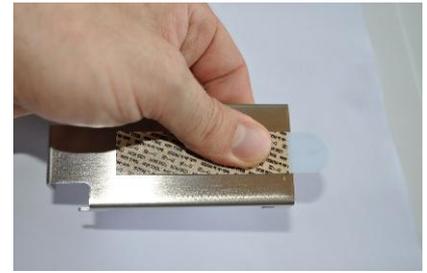

2. Carefully position the tape on the back of the cradle so that the rounded tip hangs over the bottom edge. Press firmly and evenly for 10 seconds to ensure adhesion.



When set properly, the strip and cradle should look like this.



3. Locate an area on the shower wall that is: a) visible during the shower; b) out of direct water spray; c) eye level that suits the height of all users; d) free from sensor interference (see below\*).



4. To test your chosen location, temporarily tape the cradle to the wall (white arrows) and carefully insert the device. The green LED should go off once you are out of range. If not, repeat process as necessary.

5. Now that you have found a location free from interference, remove the cradle/tape and prep the shower surface with a cloth/alcohol and allow to dry.



6. Remove the “wall” side liner of the tape and firmly press against the shower wall for 30 seconds, ensuring that the prongs of the cradle are facing upwards.



7. To ensure proper adhesion, wait 1 hour before step 7. If you haven't done so already, now may be a good time to calibrate your ShowerSaver™ (see instruction manual).



8. Fit the ShowerSaver™ into the cradle by aligning the prongs of the cradle with the slots on the back of the device. Without too much force (to avoid weakening the tape), carefully slide the device into place.

\*This means any solid objects such as walls and shower curtains. If you are still getting interference post installation, please see “sensor workaround” on page 5 of the user guide.